

## *Installation, Commissioning and Operating Manual for the A1599 24 and 40 Column Printer*

**Warning:** Fire alarm control panels contain dangerous voltages. To prevent electric shock fully open the outer door when working on the printer and do not touch any parts inside the enclosure backbox. For servicing contact suitably qualified personnel.

### **1. Installation on HP900, Duplex, Nexus and Discovery Panels**

1. Open the outer door.
2. Switch off the mains supply to the panel and disconnect the batteries.
3. Remove the printer cover plate from the rear of the display plate. This is retained by three M3 studs with nuts, spring washers and full washers.
4. Fit the printer to the rear of the plate using two M3 nuts, washers and spring washers at the hinged side of the printer body.
5. Connect the 16 way ribbon cable to the printer connector socket on the display board as shown below:

Panel	Display board number	Printer socket
HP900	A1566	CON12
Discovery	A1580	CON3
Duplex	A1621	J3
Nexus	A1575	J1

6. Hinge the printer to the display plate passing the paper through the slot in the outer door.
7. Fit the plastic thumbnut to the remaining stud.
8. Switch on the mains supply to the panel and reconnect the batteries. Observe that the power up message is printed correctly.

### **2. Operation**


Normal operation of the printer requires no direct action on the printer. See the relevant panel documentation for details on printer functionality.

#### **2.1 Replacing The Paper Roll**

1. Open the outer door.
2. Remove the paper roll and spindle from the paper holder by prising apart the arms of the roll holder and removing the spindle.
3. Replace the empty roll with a new roll and refit the spindle to the paper roll holder.
4. Remove the thumbnut from the printer housing and swing the printer away from the back of the door.

Checked by:.....

5. Insert the end of the paper roll into the slot at the bottom of the mechanism. This is shown in Figure 1.
6. Press the paper feed button on the printer PCB while gently pushing the end of the paper into the mechanism. The paper will be drawn into the mechanism. Release the paper feed when about 10mm of paper has been ejected from the mechanism.
7. Hinge the printer to the display plate passing the paper through the slot in the outer door.
8. Replace the plastic thumbnut on the appropriate stud.

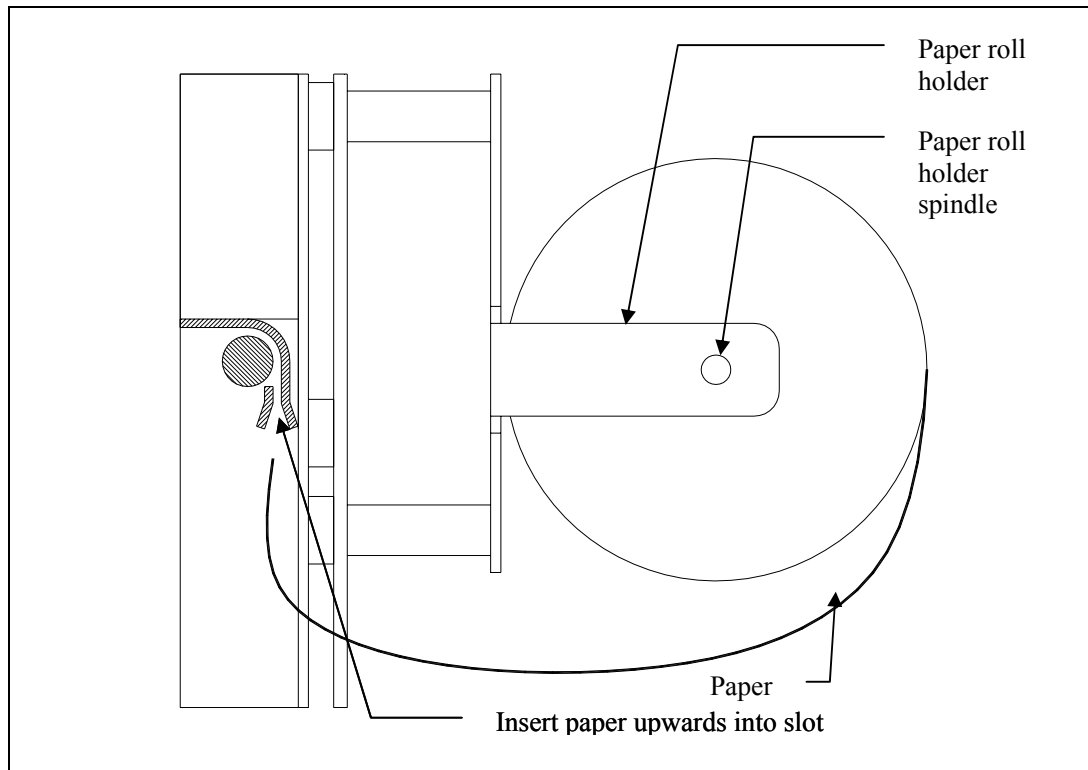

**Figure 1 – Side view of printer mechanism**

## **2.2 Replacing the printer ribbon**

1. Open the outer door of the panel.
2. Remove the thumbnut from the printer housing and swing the printer away from the back of the door.
3. The printer ribbon casing will be visible fixed to the bottom printer mechanism.
4. Press the left hand edge of the printer ribbon casing to release the ribbon from the mechanism.
5. Remove the ribbon casing and fit the new ribbon ensuring the fabric ribbon is above the paper. The casing is clipped into position on the mechanism by applying pressure at both sides of the ribbon casing.
6. Turn the notched wheel on the printer casing to take up the slack in the printer ribbon.
7. Hinge the printer to the display plate passing the paper through the slot in the outer door.
8. Replace the plastic thumbnut on the appropriate stud.

Checked by:.....

9. Operate the printer test switch and check that the printer outputs text correctly.

### 2.3 Printer Test

Pressing the printer test button on the printer PCB will cause the printer to generate a sample output of text in several styles. The current printer configuration will also be displayed. If the test does not complete correctly check the ribbon cables connecting the printer to the display board.

## 3. Technical specification

### Physical

Size:	Height:	90mm including paper roll
	Width:	133mm overall
	Depth:	75mm
Weight:		15kg
Operating temperature:		-5°C to 40°C
Operating humidity:		5% to 95%

### Electrical

Supply voltage:	5V DC +/- 10%
Quiescent current:	20mA @ 5V
Load on standby battery:	5mA @24V
Active current:	1.5A peak

### Paper type

Paper width:	57.5 ± 0.5mm
Maximum roll diameter:	50mm

### Mechanical - 24 column printer

Number of columns:	24
Character size:	1.7mm wide x 2.4mm high (standard font)
Character dot matrix size:	5 x 7 dots
Print speed:	0.7 lines/s

### Mechanical - 40 column printer

Number of columns:	40
Character size:	1.1mm wide x 2.4mm high (standard font)
Character dot matrix size:	5 x 7 dots
Print speed:	0.4 lines/s

Checked by:.....

#### **4. Printer Connections**

##### **In Parallel Mode**

Pin	Function
1	Force low for parallel mode Note: this pin is internally pulled low by 10k resistor.
2	Busy signal output, active high.
3	D6
4	Not connected
5	D5
6	0V
7	D4
8	0V
9	D3
10	5V
11	D2
12	5V
13	D1
14	Not connected
15	D0
16	Data strobe Note: this pin is internally pulled low by 10 k resistor

### In asynchronous serial mode

Pin	Function
1	Force high for serial mode Note: this pin is internally pulled low by 10k resistor.
2	Busy signal output, active high.
3	Baud rate bit 1
4	Not connected
5	Baud rate bit 0
6	0V
7	Not used
8	0V
9	Not used
10	5V
11	Not used
12	5V
13	Not used
14	Not connected
15	D0
16	Serial data Note: this pin is internally pulled low by 10k resistor

### Baud rates for serial communications are set by pins 3 and 4 as follows

Baud rate	Bit 1 – pin 5	Bit 0 – pin 3
150	0	0
300	0	1
1200	1	0
2400	1	1